


Measure your Boman-Kemp well from outside to outside at the back of the well nearest to the foundation and from the foundation to the outer edge of the rubber at the front of the well

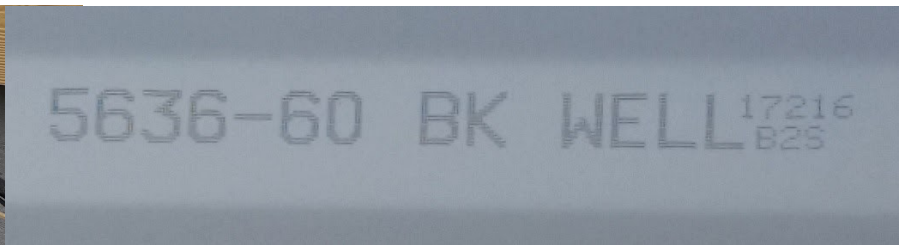

Locate the sizing stamp below the black sticker in the well